

BQ TimberLock™ Driftwood Skylift

Quick-reference demonstration guide for BuildQuote product document links.




BEFORE YOU START

- Confirm footing set-out and structural requirements.
- Check all posts, beams, rafters and brackets against the project schedule.
- Store timber dry, flat and protected from weather before assembly.
- Confirm finish system before exposing timber to site conditions.


DEMO QUICK-REFERENCE ONLY

This is not a structural installation manual. Real projects must follow the manufacturer's official guide, engineering documents and local building requirements.

Indicative installation flow

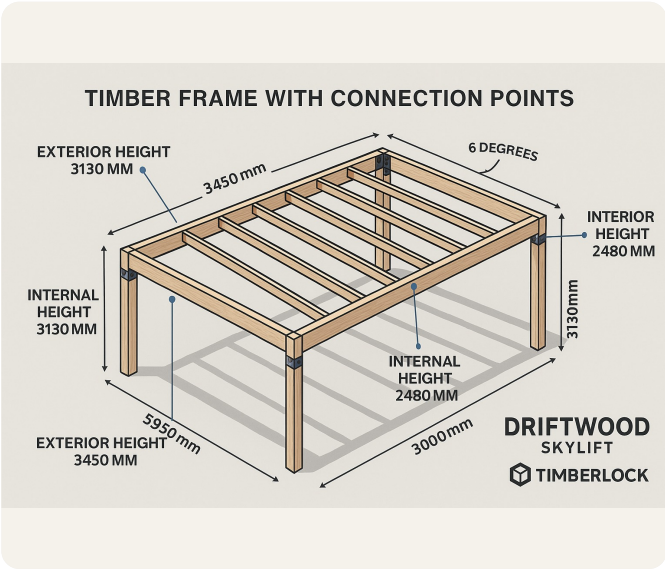

Indicative dimensions and connection points.

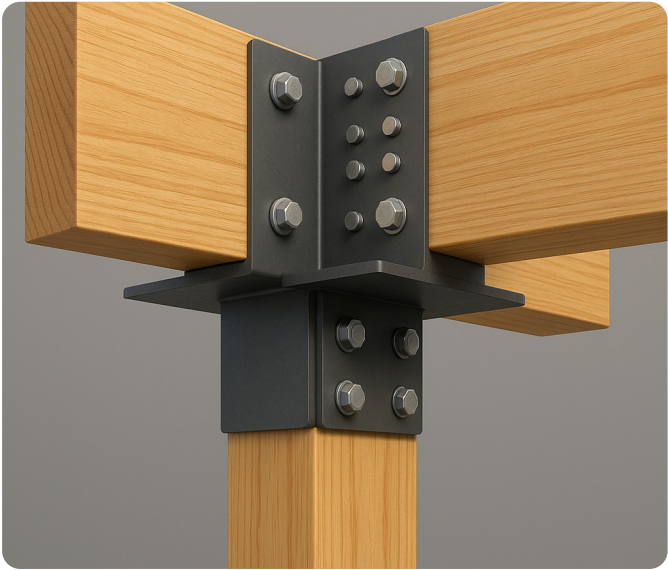

Typical beam/post connection concept.

STEP	ACTION	CHECK
01	Set out post locations and confirm slab / footing positions.	Diagonal dimensions and finished heights checked.
02	Install base plates or post fixing hardware to approved substrate.	Fixings match engineering requirements.
03	Stand posts and temporarily brace.	Posts plumb and aligned.
04	Fit primary beams and connection brackets.	Bolts tightened to specified requirements.
05	Install rafters or shade battens at nominated centres.	Spacing, fall and line of roof checked.
06	Apply finish and complete final inspection.	Exposed cuts sealed and hardware checked.